

GP-10 Sound List / サウンド・リスト



No.	Name	Modeling Type	TYPE	Modeling ON/OFF	Normal PU ON/OFF	PREAMP	CTL1	CTL2	EXP1 SW	EXP1 OFF	EXP1 ON
01	DUAL SYNC	SYNTH	OSC SYNTH	ON	ON	BG DRIVE	OSC PITCH1	FLANGER ON/OFF	WAH ON/OFF	FOOT VOL	WAH
02	DropD HiGAIN	E. GTR	LP	ON	OFF	CORE METAL	ALT TUNE ON/OFF	ALT TUNE TYPE	STR BEND ON/OFF	FOOT VOL	STRING BEND CTL
03	GR-300 LEAD	SYNTH	GR-300	ON	OFF	NATURAL CLEAN	GR-300 PITCH SW	NORMAL PU ON/OFF CHORUS ON/OFF	WAH ON/OFF	FOOT VOL	WAH
04	SEQ.TAP&HOLD	SYNTH	OSC SYNTH	ON	ON	DELUXE CRUNCH	TAP TEMPO	OSC SYNTH HOLD	WAH ON/OFF	FOOT VOL	WAH
05	AG 12str	ACOUSTIC	MA28	ON	OFF	FULL RANGE	DELAY ON/OFF	12-STRING ON/OFF	WAH ON/OFF	FOOT VOL	WAH
06	LP & MS1959	E. GTR	LP	ON	OFF	MS1959 I	OD/DS ON/OFF	STRBEND CONTROL	WAH ON/OFF	FOOT VOL	WAH
07	SYNTH BASS	SYNTH	WAVE SYNTH	ON	ON	BASS HiGAIN	CHORUS ON/OFF	DELAY ON/OFF	WAH ON/OFF	FOOT VOL	WAH
08	POLY DIST	POLY FX	DISTORTION	ON	ON	NATURAL CLEAN	FLANGER ON/OFF	DELAY ON/OFF	WAH ON/OFF	FOOT VOL	WAH
09	D-MODAL AG	ACOUSTIC	MA28	ON	OFF	FULL RANGE	ALT TUNE ON/OFF	CHORUS ON/OFF	WAH ON/OFF	FOOT VOL	WAH
10	SITAR	ACOUSTIC	SITAR	ON	OFF	FULL RANGE	CHORUS ON/OFF	REVERB ON/OFF	12-STRING ON/OFF	FOOT VOL	OFF
11	SWEEP CLEAN	SYNTH	OSC SYNTH	ON	ON	NATURAL CLEAN	OSC PITCH1	OSC SYNTH HOLD	WAH ON/OFF	FOOT VOL	WAH
12	SYN PDL BEND	SYNTH	OSC SYNTH	ON	OFF	CLEAN TWIN	PHASER ON/OFF	OSC SYNTH HOLD	WAH ON/OFF	OSC PITCH1 OSC PITCH2	WAH
13	SYMPHO DRIVE	SYNTH	OSC SYNTH	ON	ON	R-FIER MODERN	PHASER ON/OFF	OSC SYNTH HOLD AMP SOLO SW DELAY ON/OFF	WAH ON/OFF	FOOT VOL	WAH
14	BASS CLEAN	E. BASS	PB	ON	OFF	BASS CLEAN	AMP TYPE	CHORUS ON/OFF	WAH ON/OFF	FOOT VOL	WAH
15	SEPARATE WAY	SYNTH	OSC SYNTH	ON	OFF	NATURAL CLEAN	Normal PU ON/OFF	OSC SYNTH HOLD	WAH ON/OFF	FOOT VOL	WAH
16	7CAPO 12str	E. GTR	MOD ST	ON	OFF	JC-120	ALT TUNE ON/OFF	STRBEND CONTROL	WAH ON/OFF	FOOT VOL	WAH
17	FRETLESS LD	E. GTR	FRETLESS	ON	OFF	NATURAL CLEAN	PITCH SHIFTER ON/OFF	CHORUS ON/OFF	WAH ON/OFF	FOOT VOL	WAH
18	SLOW PAD FLT	POLY FX	SLOW PAD	ON	ON	DELUXE CRUNCH	DELAY FEEDBACK	LIMITER ON/OFF	WAH ON/OFF	FOOT VOL	WAH
19	POLY T. WAH	POLY FX	TOUCH WAH	ON	OFF	NATURAL CLEAN	OD/DS ON/OFF	DELAY ON/OFF	WAH ON/OFF	FOOT VOL	WAH
20	SWEEP DRIVE	SYNTH	OSC SYNTH	ON	ON	STACK CRUNCH	PHASER ON/OFF	NORMAL PU ON/OFF	WAH ON/OFF	FOOT VOL	WAH
21	335 FUSION	E. GTR	335	ON	OFF	PRO CRUNCH	OD/DS ON/OFF	CHORUS ON/OFF	WAH ON/OFF	FOOT VOL	WAH
22	HARMO IN C	E. GTR	BRIGHT HUM	ON	OFF	POWER DRIVE	EG TYPE	HARMONIST ON/OFF	WAH ON/OFF	FOOT VOL	WAH
23	5th MIX SOLO	SYNTH	WAVE SYNTH	ON	ON	BG LEAD	Normal PU ON/OFF	PITCH SHIFTER	WAH ON/OFF	FOOT VOL	WAH
24	FOOT ARMING	E. GTR	BRIGHT HUM	ON	OFF	POWER DRIVE	AMP SOLO SW	ALT TUNE ON/OFF	STR BEND ON/OFF	FOOT VOL	STRBEND CONTROL
25	FUNK GT SET	E. GTR	CLA ST	ON	OFF	NATURAL CLEAN	LIMITER ON/OFF	FX TYPE	WAH ON/OFF	FOOT VOL	WAH
26	HYPER WAH	SYNTH	OSC SYNTH	ON	ON	MS1959 I+II	DELAY ON/OFF	PHASER ON/OFF	WAH ON/OFF	FOOT VOL	WAH OSC PITCH2
27	ORNG CRUNCH	E. GTR	TE	ON	OFF	ORNG ROCK REVERB	TREMOLO	CHORUS ON/OFF	WAH ON/OFF	FOOT VOL	WAH
28	ForSLIDE OPE	E. GTR	LP	ON	OFF	MS1959 I	ALT TUNE ON/OFF	ALT TUNE TYPE	WAH ON/OFF	FOOT VOL	WAH
29	PORTA OSC R	SYNTH	OSC SYNTH	ON	ON	COMBO CRUNCH	OSC PORTAMENTO	FXROT SPEEDSELECT	WAH ON/OFF	FOOT VOL	WAH
30	A.DLY CRUNCH	E. GTR	P90	ON	OFF	COMBO CRUNCH	CHORUS ON/OFF	DELAY ON/OFF	FX ON/OFF	FOOT VOL	FXFLANGER MANUAL
31	LEAD CTL1--2	E. GTR	BRIGHT HUM	ON	OFF	HIGAIN STACK	ALT TUNE ON/OFF	OD/DS ON/OFF	WAH ON/OFF	FOOT VOL	WAH
32	TX BLUES MOD	E. GTR	CLA ST	ON	ON	TWEED	MIXER BALANCE	OD/DS ON/OFF	WAH ON/OFF	FOOT VOL	WAH
33	SYN BASS MIX	SYNTH	WAVE SYNTH	ON	ON	BASS HiGAIN	CHORUS ON/OFF REVERB ON/OFF	DELAY ON/OFF	WAH ON/OFF WAVE SYNTH OCTAVE	FOOT VOL	WAH
34	SYNC SEQ.	SYNTH	OSC SYNTH	ON	ON	TWEED	TAP TEMPO	OD/DS ON/OFF	WAH ON/OFF	FOOT VOL	WAH
35	OSC CRYSTAL	SYNTH	OSC SYNTH	ON	ON	NATURAL CLEAN	OSC PORTAMENTO	FLANGER ON/OFF	WAH ON/OFF	FOOT VOL	WAH
36	HI RESO MIX	ACOUSTIC	SITAR	ON	ON	NATURAL CLEAN	REVERB ON/OFF	ALT TUNE ON/OFF	WAH ON/OFF	FOOT VOL	WAH
37	BLUES HARP	SYNTH	OSC SYNTH	ON	ON	STACK CRUNCH	OSC PITCH1 OSC PITCH2	OSC SYNTH HOLD	WAH ON/OFF OD/DS ON/OFF	FOOT VOL	WAH
38	BASS SEQ.	SYNTH	OSC SYNTH	ON	ON	CORE METAL	TAP TEMPO	REVERB ON/OFF OSC PITCH2	WAH ON/OFF	FOOT VOL	WAH
39	TE > OPEN G	E. GTR	TE	ON	OFF	COMBO CRUNCH	ALT TUNE ON/OFF	MDL STRING LEVEL6	WAH ON/OFF	FOOT VOL	WAH
40	L4 BALLADE	E. GTR	L4	ON	OFF	NATURAL CLEAN	EG TYPE	AMP SOLO SW	WAH ON/OFF	FOOT VOL	WAH
41	RICK 12str	E. GTR	RICK	ON	OFF	CLEAN TWIN	CHORUS ON/OFF DELAY ON/OFF	STRBEND CONTROL	ALT TUNE ON/OFF	FOOT VOL	OFF
42	CRYSTAL BELL	POLY FX	CRYSTAL	ON	ON	NATURAL CLEAN	POLYFX TYPE	NORMAL PU ON/OFF	WAH ON/OFF	FOOT VOL	WAH
43	LASER BEAM	SYNTH	OSC SYNTH	ON	OFF	NATURAL CLEAN	DELAY ON/OFF	OD/DS ON/OFF EQ ON/OFF	WAH ON/OFF	FOOT VOL OSC FLTR RESO	WAH
44	SOFT BRASS	SYNTH	OSC SYNTH	ON	OFF	NATURAL CLEAN	OSC PITCH2	OSC SYNTH HOLD	WAH ON/OFF	FOOT VOL	WAH
45	SQR BELL	SYNTH	OSC SYNTH	ON	ON	COMBO CRUNCH	FX ROTARY SPEEDSELECT	DELAY ON/OFF	LED ON/OFF	FOOT VOL OSC FLTR RESO	NORMAL PU VOL
46	WIDE MOD CLN	POLY FX	RICH MODULATION	ON	OFF	NATURAL CLEAN	COMPRESSOR ON/OFF	DELAY ON/OFF	WAH ON/OFF	FOOT VOL	WAH
47	LP+STACK	E. GTR	LP	ON	OFF	MS1959 I	OD/DS ON/OFF	DELAY ON/OFF	WAH ON/OFF	FOOT VOL	WAH
48	SuperModlate	POLY FX	RICH MODULATION	ON	ON	JC-120	POLY FX TYPE	EQ ON/OFF	WAH ON/OFF	FOOT VOL	FOOT VOL
49	SLOW PAD	POLY FX	SLOW PAD	ON	OFF	FULL RANGE	PHASER ON/OFF	DELAY ON/OFF	WAH ON/OFF	FOOT VOL	WAH

No.	Name	Modeling Type	TYPE	Modeling ON/OFF	Normal PU ON/OFF	PREAMP	CTL1	CTL2	EXP1 SW	EXP1 OFF	EXP1 ON
50	CHO STRINGS	SYNTH	OSC SYNTH	ON	ON	NATURAL CLEAN	DELAY ON/OFF	MODELING ON/OFF	WAH ON/OFF	FOOT VOL	WAH
51	SYN MIX SOLO	SYNTH	WAVE SYNTH	ON	ON	POWER DRIVE	NORMAL PU ON/OFF	PITCH SHIFTER ON/OFF	WAH ON/OFF	FOOT VOL	WAH
52	STRINGS	SYNTH	OSC SYNTH	ON	ON	CLEAN TWIN	FLANGER ON/OFF	DELAY ON/OFF	WAH ON/OFF	FOOT VOL	WAH
53	EXP PDL FLOW	SYNTH	OSC SYNTH	ON	ON	BG LEAD	TAP TEMPO	NORMAL PU ON/OFF	WAH ON/OFF	FOOT VOL	WAH
54	COSMIC DRIVE	SYNTH	OSC SYNTH	ON	ON	MS1959 I	PHASER ON/OFF	DELAY ON/OFF	WAH ON/OFF	FOOT VOL	WAH
55	LATE 60s SET	E. GTR	CLA ST	ON	OFF	MS1959 I	OD/DS ON/OFF	FX TYPE	WAH ON/OFF	FOOT VOL	WAH
56	JAZZ GUITAR	E. GTR	L4	ON	OFF	NATURAL CLEAN	OD/DS ON/OFF CHORUS ON/OFF	DELAY ON/OFF	WAH ON/OFF	FOOT VOL	WAH
57	GB45 BASIC	ACOUSTIC	GB45	ON	ON	TWEED	12-STRING ON/OFF	ALT TUNE ON/OFF	WAH ON/OFF	MIXER BALANCE	WAH
58	12st FRETLESS	E. GTR	FRETLESS	ON	OFF	NATURAL CLEAN	NORMAL PU ON/OFF DELAY ON/OFF	ALT TUNE ON/OFF	WAH ON/OFF	FOOT VOL	WAH
59	MONO SYN DRV	SYNTH	OSC SYNTH	ON	ON	POWER DRIVE	NORMAL PU ON/OFF	OD/DS ON/OFF	WAH ON/OFF	FOOT VOL	WAH
60	RT CRYSTAL	POLY FX	CRYSTAL	ON	OFF	NATURAL CLEAN	FX ROTARY SPEEDSELECT	DELAY ON/OFF	WAH ON/OFF	FOOT VOL	WAH
61	FRETLESS BASS	E. BASS	FRETLESS	ON	OFF	BASS CLEAN	OD/DS ON/OFF	DELAY ON/OFF	WAH ON/OFF	FOOT VOL	WAH
62	BUBBLE CRNCH	SYNTH	OSC SYNTH	ON	ON	STACK CRUNCH	OD/DS ON/OFF	DELAY ON/OFF	WAH ON/OFF	FOOT VOL	WAH
63	HVY FUNK DRV	SYNTH	WAVE SYNTH	ON	ON	EXTREME LEAD	DELAY ON/OFF	WAVE SYNTH OCTAVE	WAH ON/OFF	FOOT VOL	WAH
64	TWAH STRINGS	SYNTH	OSC SYNTH	ON	ON	NATURAL CLEAN	T. WAH ON/OFF	DELAY ON/OFF	WAH ON/OFF	FOOT VOL	WAH
65	MA28 SET	ACOUSTIC	MA28	ON	ON	DELUXE CRUNCH	ALT TUNE ON/OFF	12-STRING ON/OFF	NORMAL PU ON/OFF	FOOT VOL	MIXER BALANCE
66	B-BENDER TL	E. GTR	TE	ON	OFF	DELUXE CRUNCH	EG TYPE	AMP SOLO SW	LED ON/OFF	FOOT VOL	STRING BEND CTL
67	LIP & DADGAD	E. GTR	LIPS	ON	OFF	COMBO CRUNCH	ALT TUNE ON/OFF	EG TYPE	WAH ON/OFF	FOOT VOL	WAH
68	NICE NYLON	ACOUSTIC	NYLON	ON	OFF	FULL RANGE	ALT TUNE ON/OFF	DELAY ON/OFF	REVERB ON/OFF	FOOT VOL	REVERB E.LEVEL
69	12str RICK	E. GTR	RICK	ON	ON	VO DRIVE	DELAY ON/OFF	CHORUS ON/OFF	WAH ON/OFF	FOOT VOL	WAH
70	BANJO → CTL=G	ACOUSTIC	BANJO	ON	OFF	FULL RANGE	ALT TUNE ON/OFF	REVERB ON/OFF	WAH ON/OFF	FOOT VOL	WAH
71	[Gt] SuperCln	-	-	OFF	ON	JC-120	LIMITER ON/OFF	CHORUS ON/OFF	WAH ON/OFF	FOOT VOL	WAH
72	[Gt] JAZZ CLN	-	-	OFF	ON	NATURAL CLEAN	DELAY ON/OFF	REVERB ON/OFF	WAH ON/OFF	FOOT VOL	WAH
73	[Gt] RetroTrm	-	-	OFF	ON	DELUXE CRUNCH	TREMOLO ON/OFF	DELAY ON/OFF	WAH ON/OFF	FOOT VOL	WAH
74	[Gt] Ukcrunch	-	-	OFF	ON	VO LEAD	LIMITER ON/OFF	CHORUS ON/OFF	WAH ON/OFF	FOOT VOL	WAH
75	[Gt] FiltrFzz	-	-	OFF	ON	COMBO CRUNCH	OD/DS ON/OFF	CHORUS ON/OFF	WAH ON/OFF	FOOT VOL	WAH
76	[Gt] OD1+1959	-	-	OFF	ON	MS1959 I	OD/DS ON/OFF	DELAY ON/OFF	WAH ON/OFF	FOOT VOL	WAH
77	[Gt] RT CRNCH	-	-	OFF	ON	MATCH DRIVE	REVERB ON/OFF	FX ROTARY SPEEDSELECT	WAH ON/OFF	FOOT VOL	WAH
78	[Gt] SHOEGAZE	-	-	OFF	ON	COMBO CRUNCH	DELAY ON/OFF	REVERB ON/OFF	LED ON/OFF	FOOT VOL	DELAY TIME
79	[Gt] GATE REV	-	-	OFF	ON	BGNR UB METAL	FX PITCH SHIFTER PITCH1	PITCH SHIFTER	WAH ON/OFF	FOOT VOL	WAH
80	[Gt] CTL BEND	-	-	OFF	ON	EXTREME LEAD	FX P. BND POSITION	FX P. BND POSITION	WAH ON/OFF	FOOT VOL	WAH
81	[Gt] CLEAN 1	-	-	OFF	ON	NATURAL CLEAN	OD/DS ON/OFF DELAY ON/OFF	CHORUS ON/OFF	WAH ON/OFF	FOOT VOL	WAH
82	[Gt] CLEAN 2	-	-	OFF	ON	JC-120	CHORUS ON/OFF	DELAY ON/OFF	WAH ON/OFF	FOOT VOL	WAH
83	[Gt] CLEAN 3	-	-	OFF	ON	CLEAN TWIN	PHASER ON/OFF	DELAY ON/OFF AMP TYPE AMP LEVEL	WAH ON/OFF	FOOT VOL	WAH
84	[Gt] CRUNCH 1	-	-	OFF	ON	COMBO CRUNCH	OD/DS ON/OFF DELAY ON/OFF	CHORUS ON/OFF	WAH ON/OFF	FOOT VOL	WAH
85	[Gt] CRUNCH 2	-	-	OFF	ON	DELUXE CRUNCH	OD/DS ON/OFF DELAY ON/OFF	CHORUS ON/OFF	WAH ON/OFF	FOOT VOL	WAH
86	[Gt] CRUNCH 3	-	-	OFF	ON	VO DRIVE	OD/DS ON/OFF DELAY ON/OFF	CHORUS ON/OFF	WAH ON/OFF	FOOT VOL	WAH
87	[Gt] DRIVE 1	-	-	OFF	ON	POWER DRIVE	OD/DS ON/OFF DELAY ON/OFF	CHORUS ON/OFF	WAH ON/OFF	FOOT VOL	WAH
88	[Gt] DRIVE 2	-	-	OFF	ON	BG LEAD	OD/DS ON/OFF DELAY ON/OFF	CHORUS ON/OFF	WAH ON/OFF	FOOT VOL	WAH
89	[Gt] DRIVE 3	-	-	OFF	ON	MS1959 I	OD/DS ON/OFF DELAY ON/OFF	CHORUS ON/OFF	WAH ON/OFF	FOOT VOL	WAH
90	[Gt] BEND +/-	-	-	OFF	ON	EXTREME LEAD	DELAY ON/OFF	FX P. BND PITCH	FX ON/OFF	FOOT VOL	P. BND POSITION
91	Init Patch	E. GTR	CLA ST	ON	ON	NATURAL CLEAN	OFF	OFF	WAH ON/OFF	FOOT VOL	WAH
92	Init Patch	E. GTR	CLA ST	ON	ON	NATURAL CLEAN	OFF	OFF	WAH ON/OFF	FOOT VOL	WAH
93	Init Patch	E. GTR	CLA ST	ON	ON	NATURAL CLEAN	OFF	OFF	WAH ON/OFF	FOOT VOL	WAH
94	Init Patch	E. GTR	CLA ST	ON	ON	NATURAL CLEAN	OFF	OFF	WAH ON/OFF	FOOT VOL	WAH
95	Init Patch	E. GTR	CLA ST	ON	ON	NATURAL CLEAN	OFF	OFF	WAH ON/OFF	FOOT VOL	WAH
96	Init Patch	E. GTR	CLA ST	ON	ON	NATURAL CLEAN	OFF	OFF	WAH ON/OFF	FOOT VOL	WAH
97	Init Patch	E. GTR	CLA ST	ON	ON	NATURAL CLEAN	OFF	OFF	WAH ON/OFF	FOOT VOL	WAH
98	Init Patch	E. GTR	CLA ST	ON	ON	NATURAL CLEAN	OFF	OFF	WAH ON/OFF	FOOT VOL	WAH
99	Init Patch	E. GTR	CLA ST	ON	ON	NATURAL CLEAN	OFF	OFF	WAH ON/OFF	FOOT VOL	WAH